

- How to change the sensitivity level of the sensors?

It is not possible to change the sensitivity level of the sensors. The sensitivity is constantly changing based on the user inputs thanks to the adaptive algorithm of CoMoveIT.

**Remark:** There is always a minimum sensitivity value, below which the sensitivity cannot furtherly decreased.